


ASSEMBLY INSTRUCTIONS

TERRACE BENCH

MODEL NO. 71123 4-foot
HARDWARE BAG NO. SA6696

Thank you for purchasing a Terrace Bench. Please check that all parts are contained. Separate hardware according to size. Do not tighten bolted joints until assembly is complete.

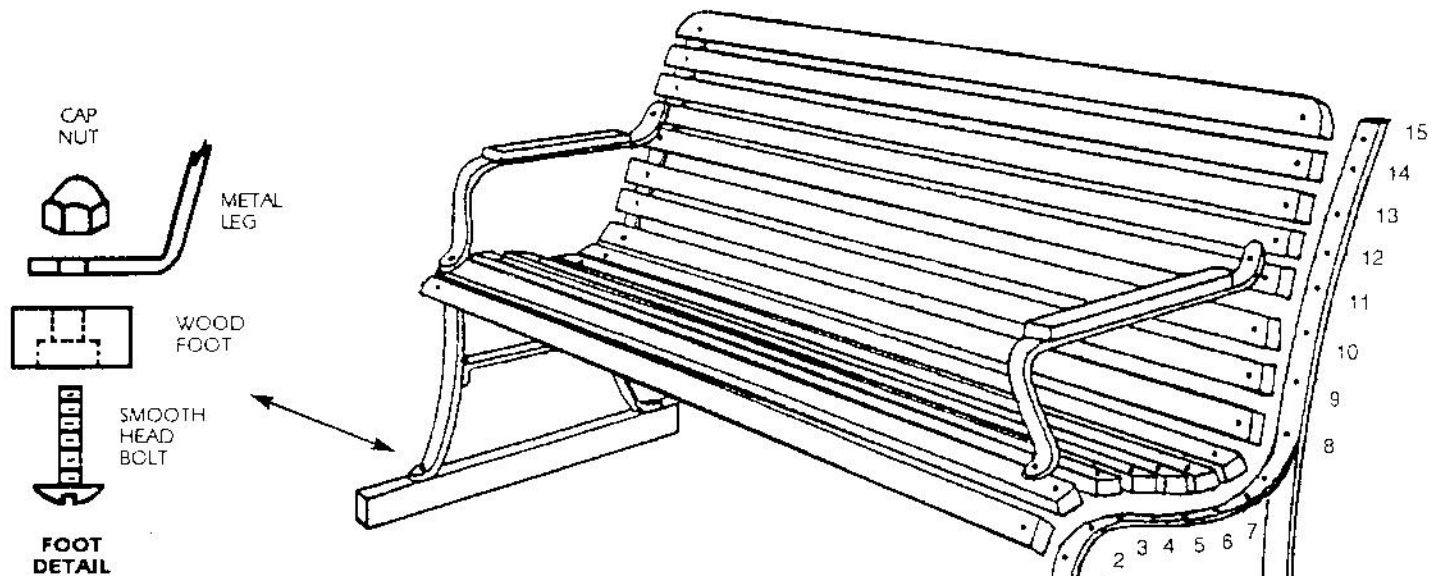

1. Attach wide slat to No. 15 (top hole) in leg assemblies, using 1-1/2" smooth head bolts. Secure with nuts.
2. To form bench seat, attach narrow slats to metal frames, using 1-1/2" smooth head bolts. Start slat assembly with No. 1 (see illustration) and continue through slats No. 3, 4, 5, 6, 7, 8, 11, 13 and 14. Secure with nuts.
3. Attach slats to No. 9 and 10 using 1-3/4" smooth head bolts. Secure with nuts.
4. Attach formed arm rests to metal arms using 1-1/2" smooth head bolts.
5. Place No. 2 slat in position, attach arm assembly by using 1-3/4" slotted head bolt. Insert bolt through foot of arm, slat and leg assembly. Secure with nut. Repeat with opposite arm assembly.
6. Place No. 12 slat in position, using 1-3/4" slotted head bolts, insert bolt through arm, slat and leg assembly. Secure with nut. Repeat with second arm assembly.
7. Insert 2-3/4" smooth head bolt through bottom of wood foot and then through metal leg. Secure with cap nut. Repeat with opposite leg.
8. Tighten all nuts. THE TERRACE BENCH IS COMPLETE.

NOTE: Due to climate conditions, wood and/or metal are potentially subject to expansion and contraction. Therefore, it is highly recommended that this product be examined carefully at least twice a year for possible adjustments. This is especially true for nuts, bolts, washers, and screws.

<http://www.benches.com>